

Tri-Clamp Fitting




How To Connect Tecnosoft Loggers To Pipes Using A Tri-Clamp Fitting

Need to measure temperature or pressure in a pipe? Now you can connect Tecnosoft loggers directly to the Pipe using a Tri-Clamp Fitting.

*WHICH LOGGERS CAN I USE?
S-MicroW L/XL Tri-Clamp
PressureDisk / PressureDisk 05*


Positioning a S-MicroW L/XL with Tri-Clamp Fitting

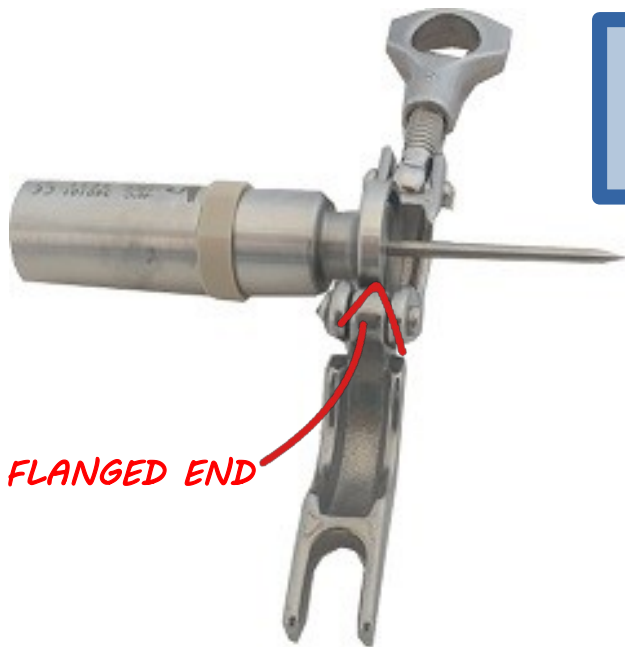

FLANGED END

Step 1

Place the flanged end at the base of the probe inside the tri-clamp fitting.

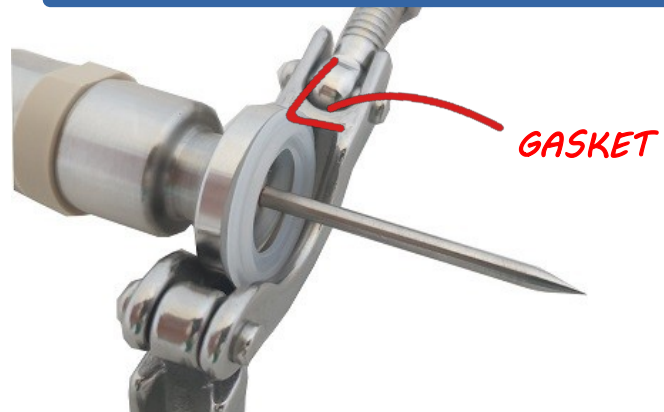


GASKET

Step 2

Position the gasket on the flanged end.

Step 3


Mate the gasket with the pipe flanged end.

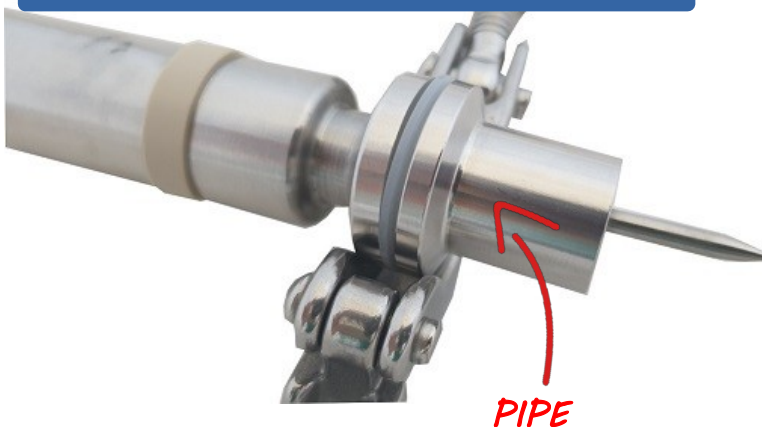

PIPE

Step 4

Close and screw tightly the Fitting.

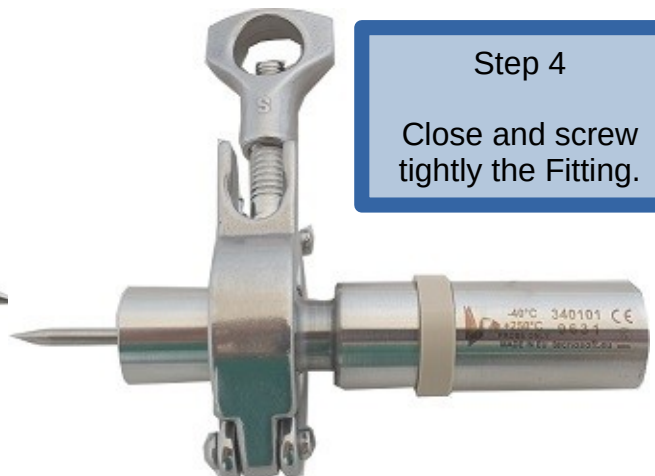

Positioning a PressureDisk / PressureDisk 05 on Tri-Clamp Fitting

Step 1

Take the threaded pipe portion with the flanged end.




Step 2

Screw the pipe portion on the threaded top of the logger.




Step 3

Mate the flanged end from the logger with the flanged end of the pipe placing a gasket between them. Make sure the gasket is placed correctly in the flanged ends indents.

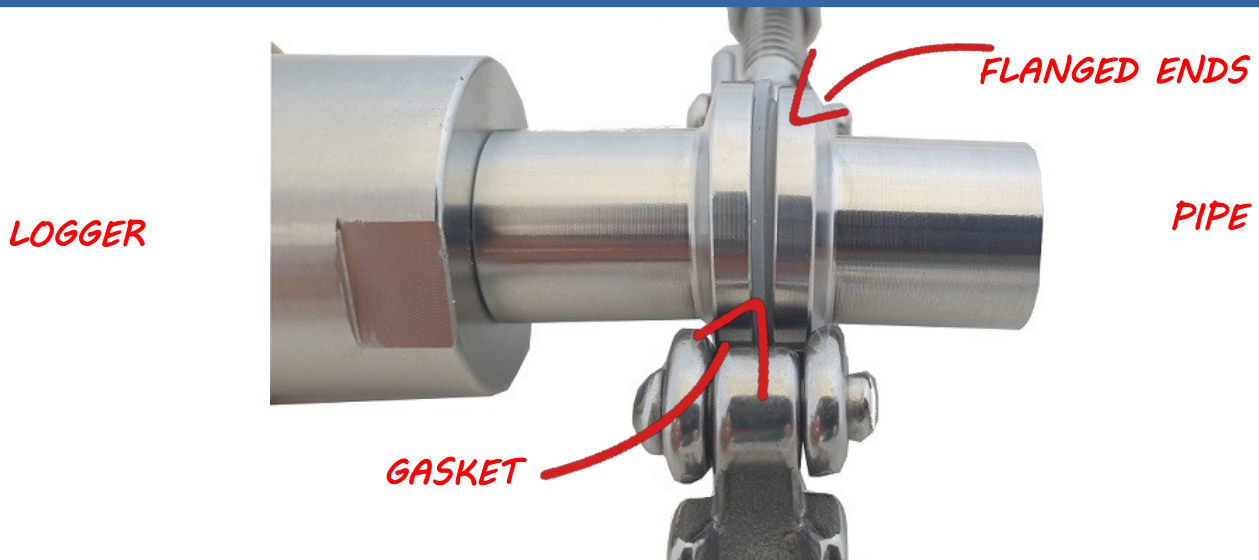

Step 4

Close the Tri-Clamp Fitting.

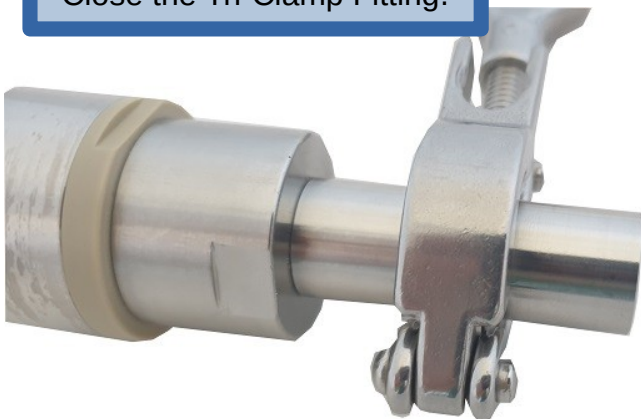

Step 5

Screw the fitting tightly.

