




Fitting base



Internal fitting system for high temperature data loggers for jars, cans, tins, bottles, vials and other types of packages

System

The fitting base can be used on any high temperature data logger from Tecnosoft, but PasteurCyl Radio and SterilCyl Radio due to their size. Kit is made up by a series of pivots of different length to which two bases are screwed on: one is fixed to the package wall and on the other the logger is placed. Fixing is made using a special adhesive rubber, that can be removed easily but it is very strong, also at high temperatures. This rubber can be used to fix the logger directly to the package walls too.

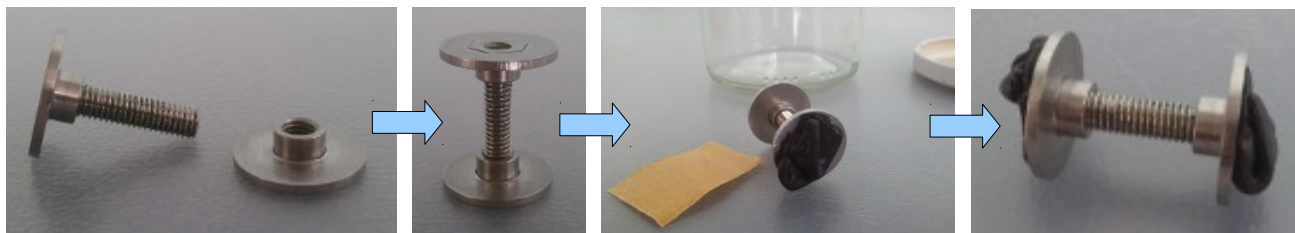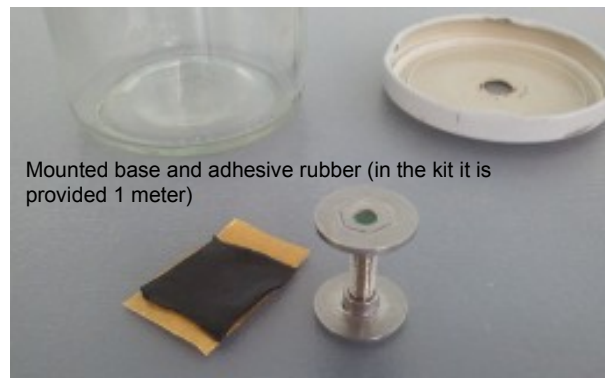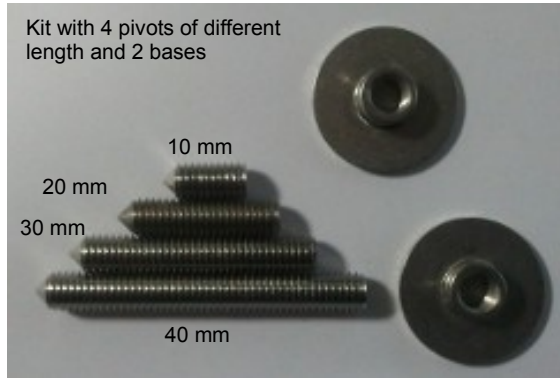

All types of loggers can be fixed.



Fields of application



Healthcare



Pharma



Food

Base can be fixed on the bottom, on the walls or on the cap of the package.



The logger can also be fixed directly to the walls of the package.

